


# Traex Small Adjustable Dish Caddy Instruction Sheet

Congratulations on your purchase of a Traex® Model SAC Small Dish Caddy. Your Small Dish Caddy has been designed and manufactured with the ease of adjustment and cleaning in mind.

Your Small Dish Caddy comes to you fully assembled. You will have to adjust it to your specific plate application.

These instructions explain how to clean, disassemble, and adjust your Small Dish Caddy to the plate size you wish to use. Please take a moment to review the instructions, and familiarize yourself with the features of your caddy.

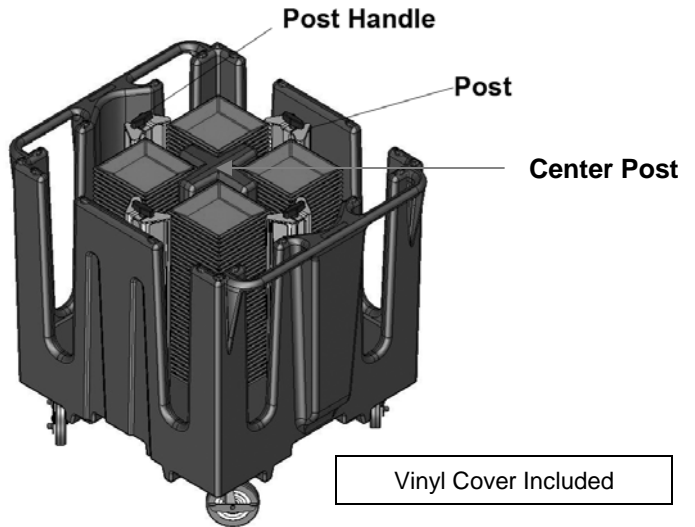


## Cleaning Instructions


To clean, wipe down or rinse with water. For difficult soil or staining, a mild cleanser may be used. Consult the cleaning product's label for specific information regarding use. Abrasive cleaners or severe scrubbing will scratch the Caddy's surface. For cleaning disassembly, see [Disassembly Instructions](#).

## Adjusting Instructions


Adjusting your Caddy to accommodate different dish diameters is easy. Simply loosen the post handle by turning counter clockwise, until the post will slide in its track (do not over loosen, just enough to allow the post to slide is sufficient). Review the dish orientation below for your SAC model. Place your dish in the orientation shown, and slide the post up to the plate, until the plate is captured between the post and the Caddy wall. Tighten the post handle. Repeat for other posts.

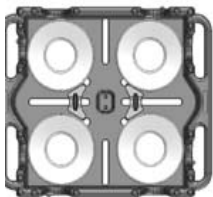


SAC-2  
10 3/8" – 11 1/4"  
Round Plates

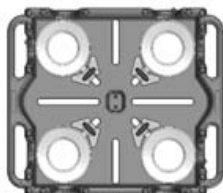


SAC-4A  
8 1/8" – 9 1/2"  
Round Plates

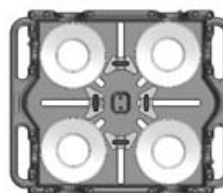


SAC-4C  
9 5/8" – 10 1/4"  
Round Plates

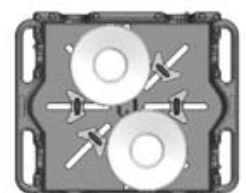

SAC-4D  
11 1/2" – 12 1/2"  
Round Plates

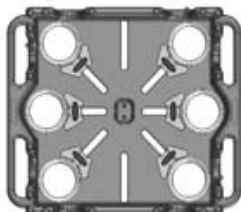


SAC-6  
4" – 8"  
Round Plates

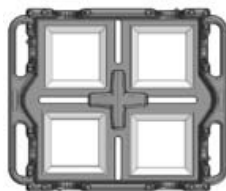

SAC-Sq1  
9 5/8" – 10 5/8"  
Square Plates



SAC-Sq4  
8" – 9 1/2"  
Square Plates

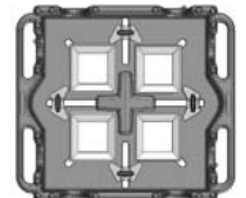

SAC-Sq5  
4" – 8"  
Square Plates

Adjustable posts (Traex® # ADP), and Center Posts (Traex® #ADSP) may be purchased if you wish to modify your model's capabilities.

# Disassembly Instructions

Your Small Dish Caddy posts may be completely disassembled for thoroughly cleaning, adding posts, or modifying post locations.

## Post Removal

### Step 1

Place the Caddy on its side so you are able to access the Post Handle and the plastic Retaining Nut at the bottom of the post.

### Step 2


Turn the Post Handle counter clockwise. As the post is loosened, the plastic Retaining Nut will unthread from the bottom of the rod. As it clears the track, hold on to it so the rod can be completely unthreaded from the Retaining Nut.

### Step 3.

Remove the post from the base. If repositioning the post that is all that is required, note the plate orientation desired on page 1, and reinsert the post in the required track. Carefully thread the plastic Retainer Nut on the post rod (do not strip), and tighten the Post Handle, allowing the Retainer Nut to be drawn into the track. See [Adjusting Instructions](#).



Post Handle

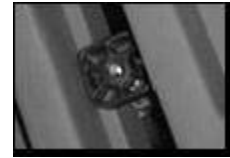

Retaining Nut




## Post Disassembly

For a thorough cleaning, the post assembly can be disassembled. Orient the E Clip so the open side faces inward. Using a small needle nose pliers, carefully grip the E Clip, and extract it. Be careful of deforming or loosing the E Clip. Slide the Handle/Rod assembly out of the plastic post. This is as far as the unit may be disassembled. Follow Cleaning Instructions provided on page 1.



Reassemble in reverse of above instructions. Be careful when reinserting the E Clip so that it does not become lost or deformed. It should snap back into position. If it has been deformed, it may require a slight adjustment to reengage properly.

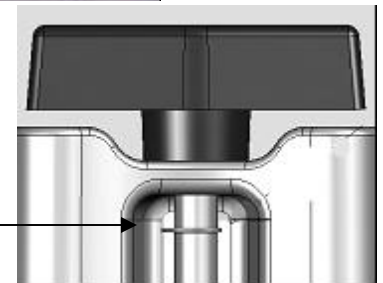

E-Clip

## Removing or Installing the Center Post

When removing, unthread the bolts from the bottom as shown. Be careful not to misplace the washers.


When installing, be sure to position the washers as shown. Hand-start the bolts to avoid stripping the threads in the Center Post, and do not over tighten (tighten only until the lock washers have flattened).



Center Post

## Replacement Parts

- P/N ADP – Complete Post Assembly
- P/N SAVC – Cover
- P/N ADSPB – Square Center Post

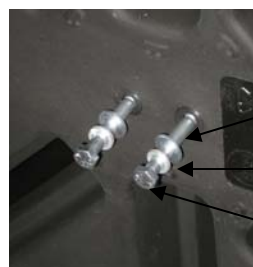

Flat Washer

Lock Washer

5/16 –18 x 2.75" Bolt



Bottom View of Center Post Assembly.

The Vollrath Company, L.L.C.  
1236 North 18th Street  
Sheboygan, WI 53081-3201  
U.S.A.

Main Tel: 800.628.0830  
Fax: 800.752.5620  
Technical Services: 800.628.0832  
Service Fax: 920.459.5462  
Canada Service: 800.695.8560  
© 2011 The Vollrath Company, L.L.C.

Rev B  
7/18/2011P/N  
9582